











gothic cabinet craft  
58-77 57th street  
Maspeth NY 11378  
phone:347-881-1440

May-09

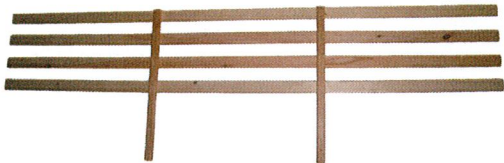TWIN SIZE PINE WOOD BUNK BED  
MODEL# BB1

## PARTS LIST

DESCRIPTION		QUANTITY
		
TOP BED. (lower of the two)		1
		
BOTTOM BED WITH BASE.  (The taller of the two)		1
		
FRONT AND BACK GUARD RAILS		2
<div> <div>2 REAR POSTS  3 1/2"X3 1/2"</div> <div>2 FRONT POSTS  3 1/2"X2"</div> </div>		
<div> <div>POSTS</div> <div>NOTE: FRONT POSTS HAVE ONE SIDE 2" WIDE. THIS IS TO ALLOW FOR DRAWERS TO FUNCTION.</div> </div>		4
<div> <div>FOOTBOARD</div> <div></div> <div>SAME SIDE AS LADDER</div> <div>1</div> </div> <div> <div>HEADBOARD</div> <div></div> <div>OPPOSITE OF LADDER</div> <div>1</div> </div>		
		LADDER 1
		1 1/2" WOOD SCREWS 110
		WASHERS 110

### TOOLS NEEDED



POWER DRILL



STEP-STOOL



PHILLIPS #2 BIT



TWO ADULTS ARE  
REQUIRED TO SET-UP  
BED





gothic cabinet craft  
58-77 57th street  
Maspeth NY 11378  
phone:347-881-1440

May-09


TWIN SIZE PINE WOOD BUNK BED  
MODEL# BB1

### SET UP INSTRUCTIONS


**USE BEDS ONLY  
AFTER MATTRESSES  
ARE INSTALLED.**

**STEP 1. MAKE SURE THAT YOU IDENTIFY ALL PARTS FROM THE PARTS LIST.**

**STEP 2. ALL POSTS HAVE A RESTING BLOCK CLOSER TO ONE END. THIS IS THE TOP POSITION BOTTOM BED ABOUT 3 FEET FROM BACK WALL (NEED THIS SPACE IN ORDER TO WORK FREELY) AND USING 1 1/2" SCREWS AND A WASHER FASTEN POSTS BY FOLLOWING MARKINS A TO A , B TO B , ETC. ON PREDRILLED HOLES.**

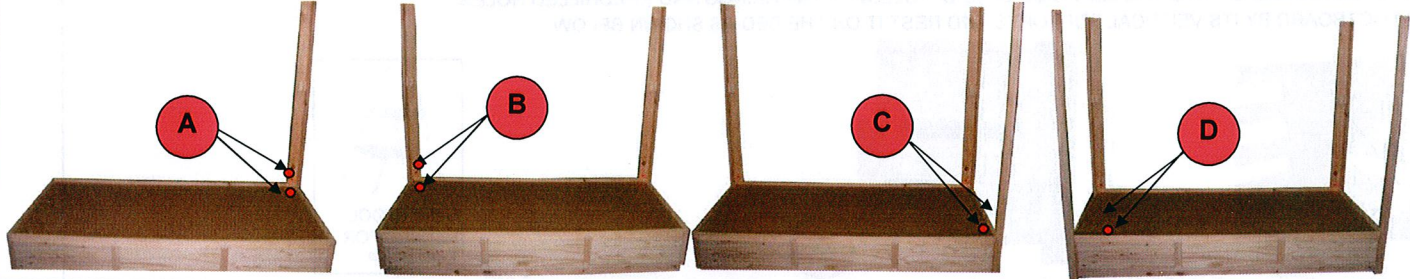

**STEP 3. LIFT TOP BED F ABOVE POSTS AND SET ON TOP OF RESTING BLOCKS AS SHOWN BELOW.**

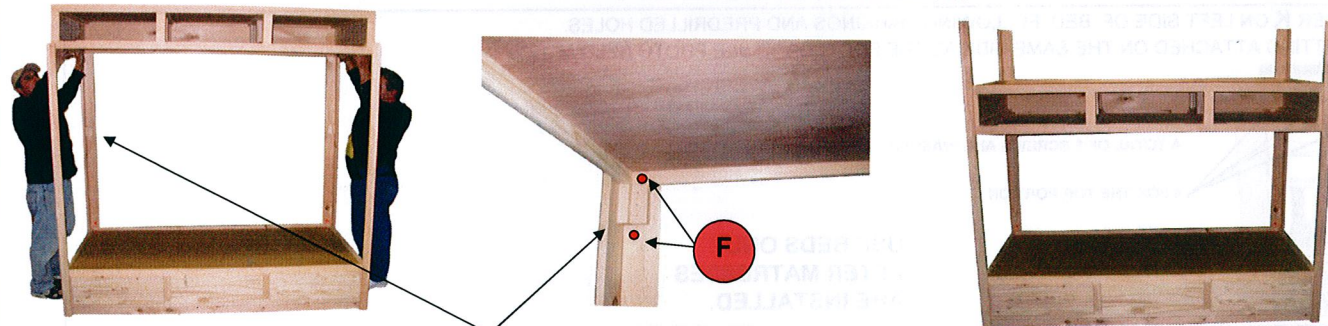


RESTING BLOCKS

USING THE POWER DRILL AND PREDRILLED HOLES FASTEN TOP PART OF POSTS A-D TO UPPER BUNK USING 1 1/2" SCREWS AND A WASHER

**STEP 4. PLACE REAR GUARDRAIL G FIRST AND REST IT ALONG THE LENGTH OF THE BED.FOLLOW DESIGNATED MARKINGS AND USING PREDRILLED HOLES AND SUPPLIED SCREWS FASTEN EACH ONE OF THE FOUR HORIZONTAL RAILS TO THE POSTS FROM THE INSIDE THEN USE 3 SCREWS ON EACH OF THE VERTICAL SUPPORTS TO FASTEN ON BACK SIDE OF BED FROM OUTSIDE.**

LIFT GUARDRAIL ABOVE SUPPORTS TO INSTALL.VERTICAL SUPPORTS FACING OUTWARDS. USE 8 SRCEWS (4 ON EITHER SIDE) TO ATTACH HORIZONTAL RAILS TO UPRIGHT POSTS


WHEN ATTACHING TOP RAIL SLIGHT PRESSURE MIGHT BE NEEDED TO BE APPLIED IN ORDER TO LEVEL IT WITH POST.

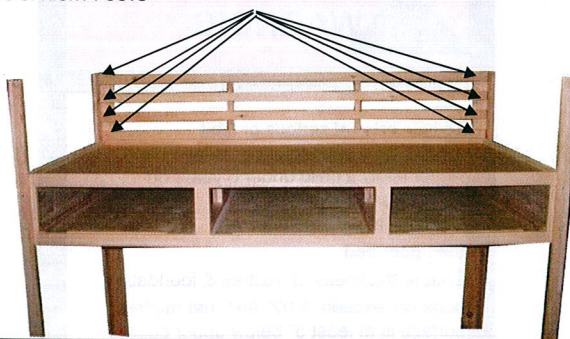

FASTENING RAIL FROM THE INSIDE




STEP STOOL  
NEEDED FOR  
THIS STEP

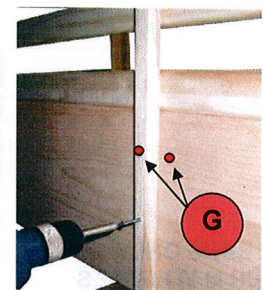


FASTENING VERTICAL SUPPORTS  
FROM THE OUTSIDE

**STEP 5. REPEAT SAME PROCEDURE AS STEP 4 FOR THE FRONT RAIL H.PAY EXTRA ATTENTION THAT VERTICAL RAILS ALIGN ON THE OUTSIDE OF THE BED WITH THE DRAWERS .LEAVE AN EQUAL DISTANCE OF SPACE BETWEEN VERTICAL RAIL SUPPORT AND DRAWER SO THERE IS NO BIND.**

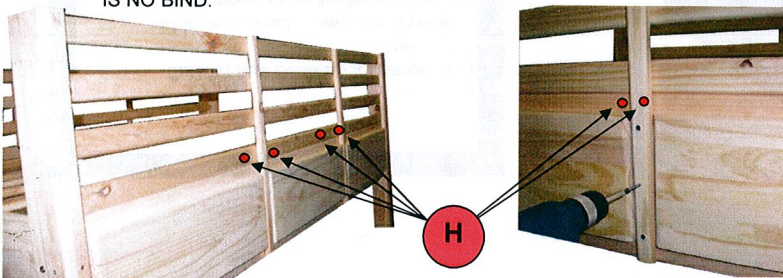

STEP STOOL  
NEEDED FOR  
THIS STEP

DRAWER

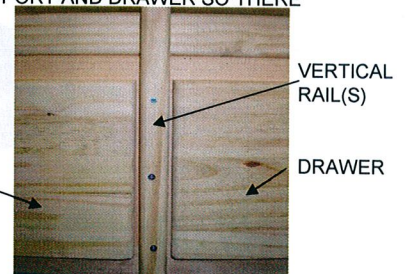


VERTICAL  
RAIL(S)

DRAWER


**WARNING: TWO ADULTS ARE REQUIRED TO SET-UP BUNK BED**




STEP 6. ATTACH HEADBOARD I ONTO THE RIGHT SIDE OF BED FOLLOWING MARKINGS AND PREDRILLED HOLES. HOLD HEADBOARD BY ITS VERTICAL SUPPORTS AND LIFT OVER POSTS AND REST IT ON THE BED.

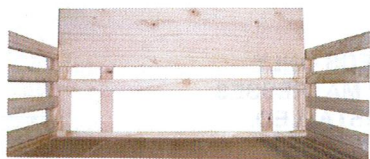

LIFT HEADBOARD ABOVE SUPPORTS TO INSTALL VERTICAL RAILS FACING OUTWARDS

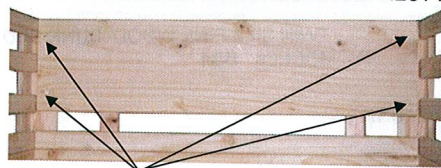

USE 4 SRCEWS (2 ON EITHER SIDE) TO ATTACH HEADBOARD FROM INSIDE

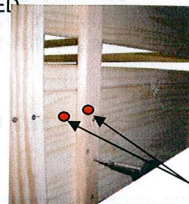


USE 6 SRCEWS (3 ON EITHER VERTICAL SUPPORT) TO ATTACH HEADBOARD FROM OUTSIDE




STEP STOOL NEEDED FOR THIS STEP

STEP 7. ATTACH FOOTBOARD J ONTO THE LEFT SIDE OF BED FOLLOWING MARKINGS AND PREDRILLED HOLES. HOLD FOOTBOARD BY ITS VERTICAL SUPPORTS AND REST IT ON THE BED AS SHOWN BELOW.

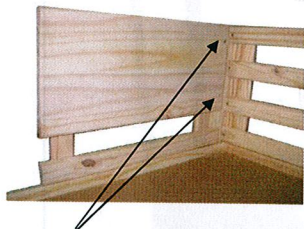

USE 2 SRCEWS TO ATTACH HEADBOARD FROM INSIDE

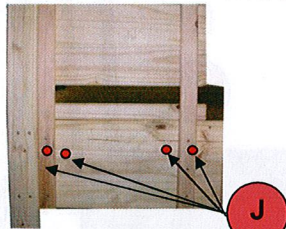


USE 4 SRCEWS (2 ON EITHER VERTICAL SUPPORT) TO ATTACH FOOTBOARD FROM OUTSIDE



STEP STOOL NEEDED FOR THIS STEP

STEP 8. ATTACH LADDER K ON LEFT SIDE OF BED FOLLOWING MARKINGS AND PREDRILLED HOLES. LADDER IS GETTING ATTACHED ON THE SAME SIDE AS THE FOOTBOARD. SEE PHOTO BELOW

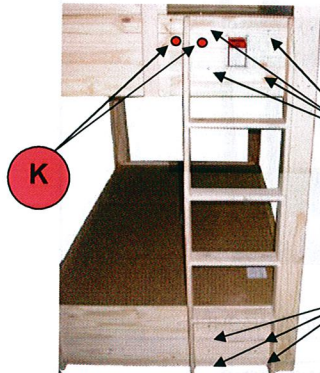

A TOTAL OF 8 SCREWS AND WASHERS ARE NEEDED TO ATTACH LADDER

4 FOR THE TOP PORTION

4 FOR THE BOTTOM PORTION

USE BEDS ONLY AFTER MATTRESSES ARE INSTALLED.

BB1 BED SHOWN FULLY ASSEMBLED



USE BEDS ONLY AFTER MATTRESSES ARE INSTALLED.



## WARNING

**To help prevent serious or fatal injuries from entrapment or falls:**

Never allow a child under 6 years on upper bunk bed.

Use only a twin mattress on the upper bed.

Ensure thickness of mattress & foundation does not exceed 9 1/2" and that mattress surface is at least 5" below upper edge of guardrails.

Use guardrails on both sides of upper bunk bed.

Prohibit horseplay on or under beds. Prohibit more than 1 person on upper bunk bed.

Use ladder for entering and leaving bunk bed.

**WARNING: TWO ADULTS ARE REQUIRED TO SET-UP BUNK BED**